
EXPLOSIONPROOF SERIES

CNYH

BZC51 Series Explosion-proof Operating Post (II B, II C)

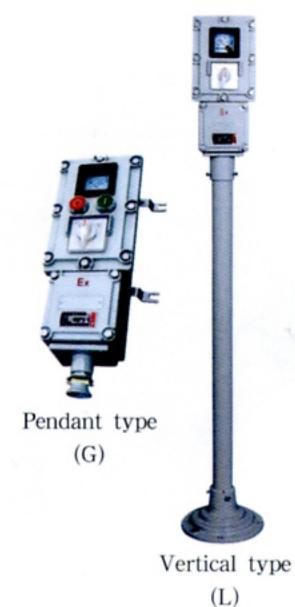

Application

- 1. Can be used in Zone 1 and Zone 2 dangerous places.
- 2. Can be used in II A, II B, II C group explosive atmosphere.
- *Please note if II C grade needed.

Features

- 1. Al-alloy diecasted shell with plastic-sprayed surface
- Inside is mounted univeral changeover switch, button, ammeter (can mount other instruments according to user's requirement) and indicator, etc.
- There are more than 30 functions of changeover switch available to be chosen.
- 4. Can be customized according to user's requirement.
- The ammeter's measuring range can be determined by users.
- 6. Suitable for steel pipe and cable wiring.
- The marker of product when ex-factory only reflect the content of chief part, the clde of other parts is ordering parameter.

Main technical parameters

Using sort	Rated voltage (V)	Rated current (A)	Ex-mark .	Protection category	Corrosion- proof Grade	Inlet's thread(G")	Cable's outside diameter (Φ, mm)
AC-3 AC-4	220/380	10	Exde II BT6 *Exde II CT6	IP55	WF1	1		. 12 ~ 17

Brief Instuction for switch code

The code of switch	Chart of contact	Equivalent switch	Rotary button's position, real line denotes location broken line denotes auto resetting	Instruction for equivalent function
т :	2 00° 40° 00° 40° 00° 2	·		Equipped with lock-stop location when starting and stopping. Can't auto-reset to provide mistake operating.
U -	1 1-2 45' 45' 2 0 3 3 0	· · · · · · · · · · · · · · · · · · ·		U: Double-control switch
v :			AC AB BC	V: Change-over switch for voltage phase-changed measuring.
w :	1 1-2 3 45 0 45 45 45 45 45 45 45 45 45 45 45 45 45			W: One auto-reset button with two usually-opens, the left is as same as the right.
x :				X: Two auto-reset buttons with two usually-opens.
Y	1 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1	1 2 2 4 5 5 5 7 8		Y: Auto-reset button with four usually-opens.
Z	C 45' 0' 45' 2			Z: Power-source programmed switch can cut off in between and cut in both the left and right which can be used as extinctive switch
a :		- T	NI 19 (3. 47)	a: For starting and inching the mixed circuit.
b .				b: Double starting switch.
e :	CP 45' 0' 45'			e: Emergency stopping switch.